


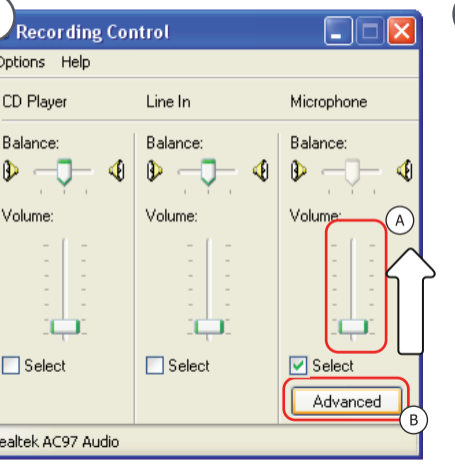
2. Installation - Windows XP

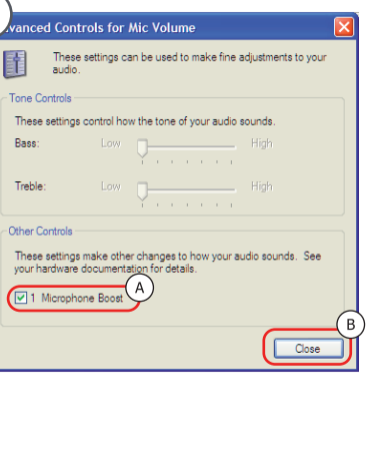
1  13:57

2  12:32 PM

3 
The 'Voice' tab is selected. The 'Device volume' section shows a slider set to approximately 75%. The 'Speaker settings' section shows 'Speaker Volume...' and 'Advanced...' buttons.

4 
The 'Voice' tab is selected. The 'Voice playback' section shows 'Default device: Realtek AC97 Audio' and a 'Volume...' button. The 'Voice recording' section shows 'Default device: Realtek AC97 Audio' and a 'Volume...' button.

5 
The 'Microphone' section is selected. The 'Volume' slider is highlighted with a red box and labeled 'A'. The 'Advanced' button is highlighted with a red box and labeled 'B'.

6 
The 'Tone Controls' section is selected. The 'Microphone Boost' checkbox is checked and highlighted with a red box and labeled 'A'. The 'Close' button is highlighted with a red box and labeled 'B'.

FAQ

Frequently asked questions

www.trust.com/17591/faq



PC Headset

MAURO | clear, digital sound | noise free speech ideal for chatting, enjoying music

© 09-09-2014 Trust International B.V. All rights reserved.

