



5. Intended use

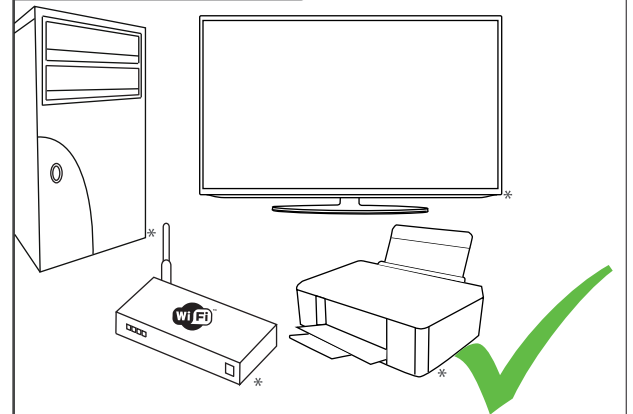


600W MAX. tot.

*not included



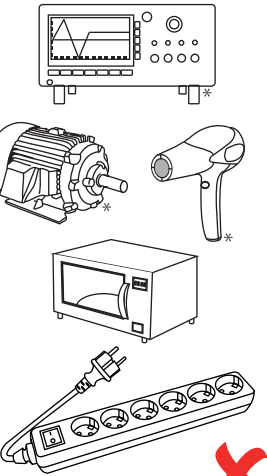


6. Display

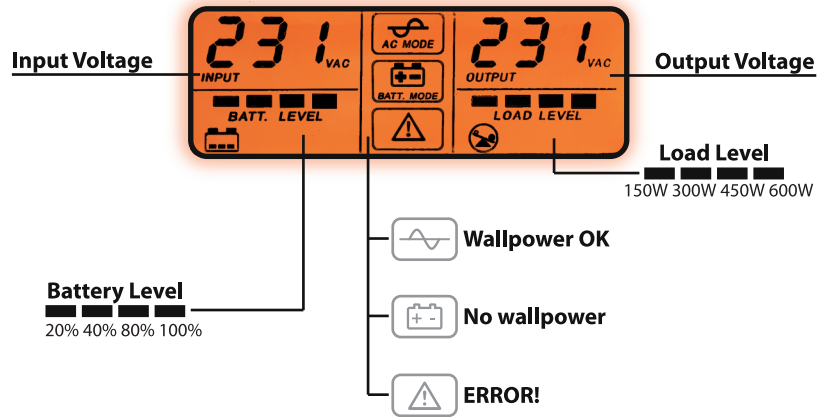

7. FAQ

 Fuse replacement 10A/250VAC

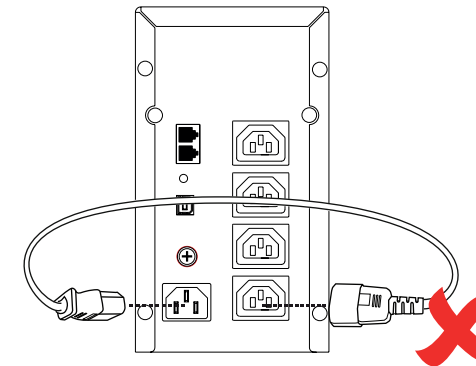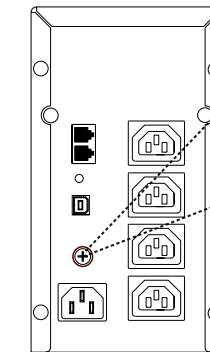

FAQ

Frequently asked questions www.trust.com/20449/faq

Trust International BV - Laan van Barcelona 600 - 3317DD, Dordrecht, NL

© 14-09-2016 Trust All rights reserved.

Trust


1300VA UPS

emergency back-up
battery for PC
with status display and Smartlink port


Quick Installation Guide




1. Connecting 1/2

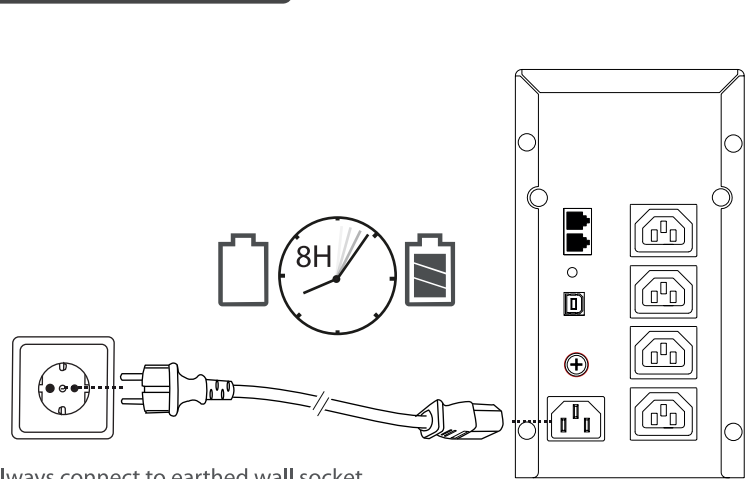

2. Connecting 2/2

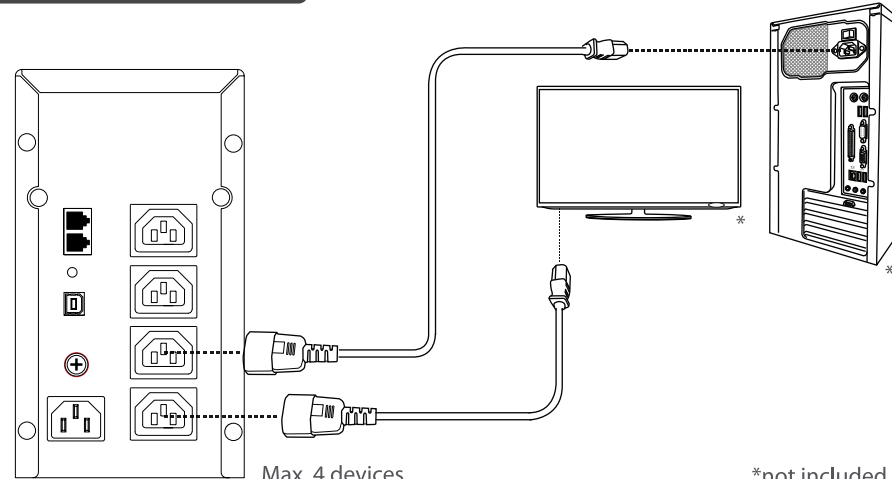

3. Switching on

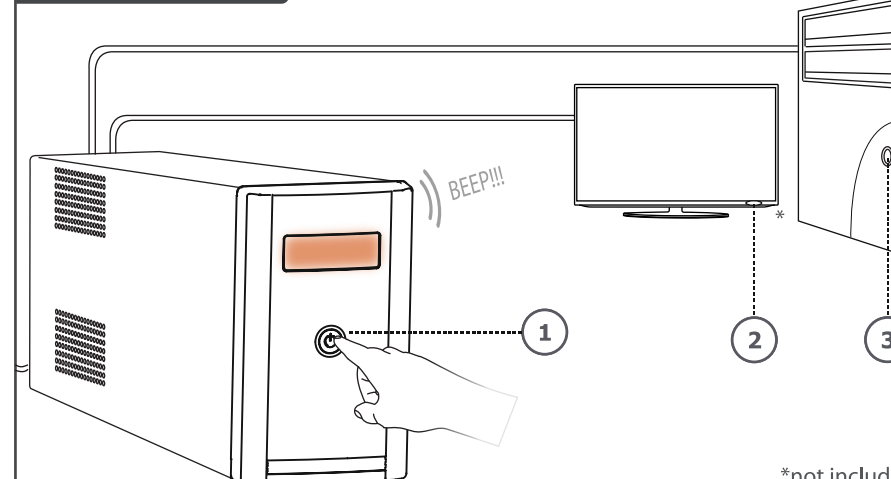

4. Power outage

