

## 1 Introduction

This manual is intended for users of the TRUST AMI MOUSE 250S MINI OPTICAL. This mouse functions without a mouse pad and is very suitable for use with a laptop. The mouse operates via the PS/2 port of your computer and has 3 buttons. The mouse operates in Windows 95 as well as 98, Me, 2000 and NT4.

UK

## 2 Safety

1. Do not use the device in damp environments, such as bathrooms, damp basements, swimming pools, etc.
2. Do not repair the device yourself.
3. Under the following circumstances have the device repaired by qualified personnel:
  - a) The cable or plug is damaged or worn;
  - b) Liquid has entered the device;
  - c) The device has fallen and/or the casing has been damaged;
4. Position the device so that the cables cannot be damaged.

## 3 Connecting

**Note:** *The mouse only functions with a PS/2 connection*

1. Make sure the computer is off and any old mouse drivers have been deleted from your system.
2. Connect the mouse to the PS/2 port of your computer.
3. Connecting to the PS/2:
  - The mouse is automatically detected and installed in all operating systems.
4. Switch the computer on.

## 4 Installation software

1. Insert the CD-ROM in your CD-ROM player. The installer will start automatically.  
If this is not the case, follow the steps below:
  - a) Select 'Run' in the start-up menu.
  - b) Type in [D:\SETUP.EXE] and click on 'OK' to start up the Trust Software Installer.
2. Figure 1 will appear.
3. Click on the language you want to use for installation.
4. Click on 'Ami Mouse 250S Mini Optical ' to start the installation.
5. Follow the steps which appear on your screen.
6. When figure 2 appears, click on 'finish'. The mouse has been installed and is ready for use.

## 5 Using Software

**Note:** *Standard settings for the third button are for horizontal and vertical scroll function.*

1. Double-click on the Trust icon in the system tray. See figure 3.
2. The mouse configuration screen will appear. See figure 4.
3. You can select the scroll button mode from the 'scroll button' menu.
4. Two possibilities:
  - Raise the scroll mode; it has all the advantages of the MS-Intellimouse and scrolls in Windows 95 / 98 / Me / 2000 / NT4.
  - Intellimouse mode, functions as a MS-Intellimouse.
5. Select the scroll speed.
6. 'Button' menu. You can program button 3 in the 'button' menu. See figure 5.
7. Click on the arrow on the right. A pulldown menu similar to the one in figure 6 will appear.
8. Select the function you want.
9. Click on 'Apply'.
10. The mouse has been programmed.

## 6 Troubleshooting

Problem	Cause	Possible solution
Mouse does not move / moves poorly.	Surface is too smooth/slippery, e.g. glass.	Use a different surface to move the mouse on.
Scroll function is not working.	Software of your previous mouse is still activated.	First delete the software of your previous mouse before you install this software. Consult the manual for your previous mouse.
	Software not installed.	Install the mouse software.
	Software configured incorrectly.	Configure the software correctly.
	Application not 100% compatible with Windows.	Use an application that is compatible.

**UK**

Register your product via [www.trust.com](http://www.trust.com) so that you are able to receive optimal guarantee and service support such as up-to-date FAQ and the latest drivers. You will also be automatically informed of developments to your product and of other Trust products. And have the chance to win some spectacular prizes.

If you still have any problems after trying these solutions, please contact one of the Trust Customer Care Centres. You can find more information on the last page of this manual. Please have the following information available:

- The article number. This is: 12326;
- Hardware data: CPU; internal memory; control system;
- A good description of what precisely does not work;
- A good description of when precisely the problem takes place.