

## 1 Introduction

This manual is intended for users of the Trust Wireless Remote Controller 200RC. The Wireless Remote Controller 200RC can be used with Trust alarm systems from the 200 series.

Your alarm centre can be operated completely with this remote control. Several remote controls can be used. This is handy if several people (housemates, for example) must be able to use the alarm system.

The remote control is sold with a 12V alkaline battery.

## 2 Safety

### 2.1 General

1. Do not use this device in damp environments such as bathrooms, swimming pools, etc.
2. Do not try to repair this device yourself.
3. Under the following circumstances disconnect the batteries and have the device repaired by qualified personnel:
  - a) Fluid has entered the device;
  - b) The device has been dropped and/or the housing is damaged.

### 2.2 Batteries

1. The remote control's alkaline battery is not rechargeable. Do not try to recharge these batteries. This may result in an explosion.
2. Do not throw the batteries in an open fire. The batteries may explode.
3. Never drill a hole in the batteries.
4. Keep the batteries out of the reach of small children.
5. When the batteries are empty, ask your local authority where you can dispose of them.

### 3 Function description

For a summary of the various functions of the remote control, see figure 1 and the table below:



UK

	Function	Description
<b>A</b>	LED	Goes on when a signal is transmitted after pressing on one of the buttons.
<b>B</b>	Panic button	Button for activating the alarm immediately in case of emergency.
<b>C</b>	Completely on / off button	Button for turning on the alarm system completely or for switching off the 'Completely On' mode or 'Home mode'. (All LEDs will go on for 0.5 seconds and then blink during the period the entire system is switched on).
<b>D</b>	Home / Lock-up button	'Home mode' means partially turning on the alarm system. In this manner, a movement-free zone can be created in your security installation. (For example: You are at home, asleep on the 1 <sup>st</sup> floor, only the detectors on the ground floor are activated). As standard setting, zone 2 is the home mode. When pressing the 'Home' button, the home mode of the alarm system will be switched on or off (all zone LEDs except the home mode LEDs go on for 0.5 seconds when switching on). Keep the button pressed down for 2 seconds to switch the keyboard lock of the alarm centre on or off.

### 4 Installation

To install the remote control, follow the steps below:

1. Remove the rear protector plate of the remote control by loosening the 2 screws with a small screwdriver. See figure 2.
2. Set your house code with the 8-component DIP switch (B). You can choose any settings. Do make sure that all wireless sensors and remote controls have the same code.
3. Insert the enclosed 12V alkaline battery (A) in the battery compartment. See figure 2.
4. Screw the rear protector plate back on.

## 5 Questions & answers

Question	Answer
<b>How many remote controls can I install on the system?</b>	You can install as many remote controls as you wish, there is no limit.
<b>How can I replace the battery of the remote control without setting off the alarm?</b>	You can replace the battery without any problems. The alarm will not go off when you open the remote control.
<b>Why does the alarm not respond to the remote control?</b>	Set your house code with the 8-component DIP switch. You can choose any settings. Do make sure that all wireless sensors and remote controls have the same code.

Check the FAQ's on the Internet ([www.trust.com](http://www.trust.com)). You can also register your product via [www.trust.com](http://www.trust.com), entitling you to receive optimal warranty service support. You will be automatically informed of developments of your and of other Trust products. You will also have the chance to win some spectacular prizes.

If you still have any problems after trying these solutions, please contact one of the Trust Customer Care Centres. You can find more information on the last page of this electronic manual, as well as at the back of the quick installation manual. Please have the following information available:

- The article number of the device. This is: 12462;
- Description of your alarm system and all components used;
- A good description of what exactly does not work;
- A good description of when exactly the problem occurs.

## 6 Specifications

Remote control	
Voltage	1x 12VDC alkaline battery
Electricity consumption in stand-by mode	0mA
Electricity consumption during use	5mA