

Installing



Drawing



Writing



Navigating



Configuring






Maintenance



Widescreen Mini Tablet

Installing and knowing your Trust tablet

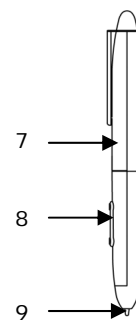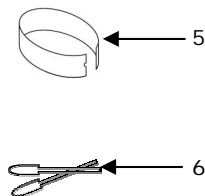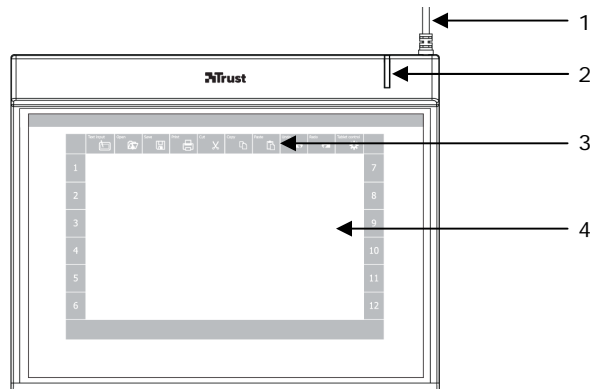

1	USB cable	6	Spare tips (x2)
2	Status LED	7	Battery compartment
3	Shortcut area	8	Pen buttons
4	Working area	9	Replaceable pen tip
5	Pen-tip removal tool		




Status LED

Blinking: pen out of range of tablet
Steady: pen in range, but not touching the surface
Off: pen touching the surface


Working area

The working area is the zone of the tablet that detects the pen movements.
The cursor on your screen will follow the movements of the pen when you move it across this part of the tablet.
The pen tip does not need to touch the surface of the tablet to be detected.


1

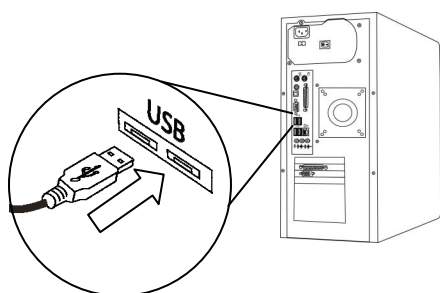



2

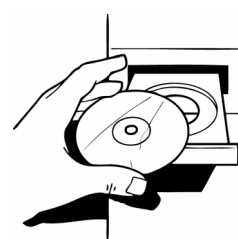

3

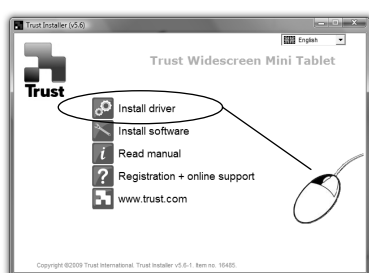

4

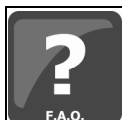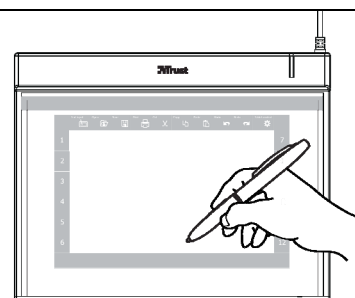


www.trust.com/16485/faq




Widescreen Mini Tablet


Drawing with your Trust tablet

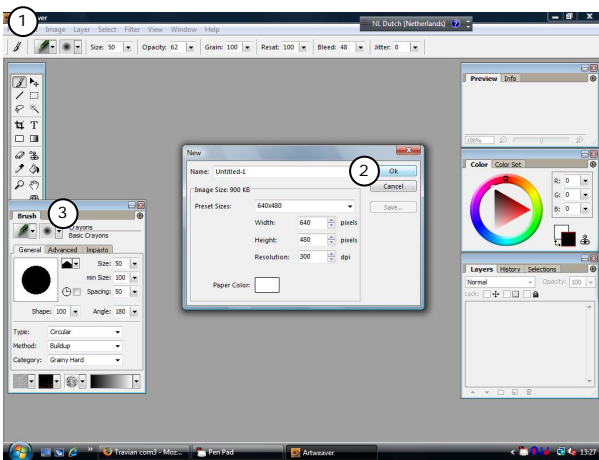


Open a drawing program (for example: Artweaver)

- 1 Create a new document (File > New)
- 2 Set the attributes of your new document, press OK
- 3 Select a tool that supports Pen Pressure Sensitivity (Ex: in Artweaver: default brush)

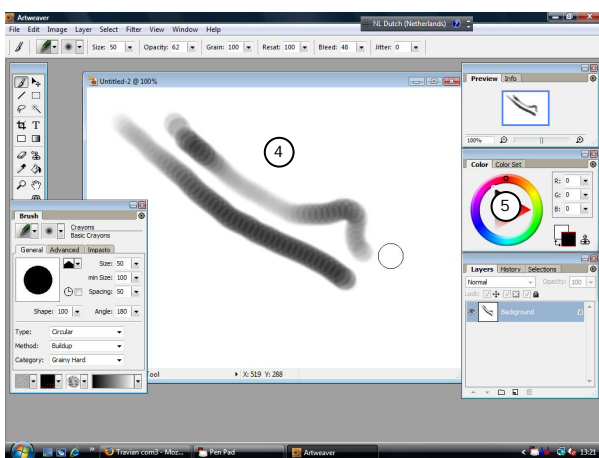

With the pen's **pressure levels** , you can use your brush the way you would use a real pencil, and draw the thickness and opacity you desire.

- 4 Move the pen in the tablet's **working area** : the cursor will follow the movements. Hovering the pen tip at about 5 mm from the surface will allow you to move the cursor on your screen. When you touch the tablet's surface, your brush will start drawing on the new document.
- 5 The color panel allows you to select different colors.



Pressure levels

The pen can detect 1024 levels of pressure, and use the variation in levels to automatically change the size, the color, or various settings of the tool you are currently using.

This allows for flexibility and gives a very intuitive feeling to your graphic work.

By default in most drawing programs, the color your brush is applying is black. Depending on the pressure you exert with the pen on the tablet's surface, your brush will paint in nuances going from white (no pressure) to black (full pressure).




Widescreen Mini Tablet


Writing with your Trust tablet


Windows Vista:



 Windows 7:



Tap  to open the Input Panel (or tap the docked input panel, on the side of the screen, or tap the text input floating bar).


Your **handwriting**  will be converted into text. You can correct, erase or modify the proposed conversion. Then press or tap Insert to have the text you handwrote entered into the active document / text input field.



Handwriting recognition


Handwriting recognition is a feature of Windows Vista and Windows 7 that converts what you write into text you can then format like any other text.


In Windows XP, a third-party software is required, to convert your handwriting into text.

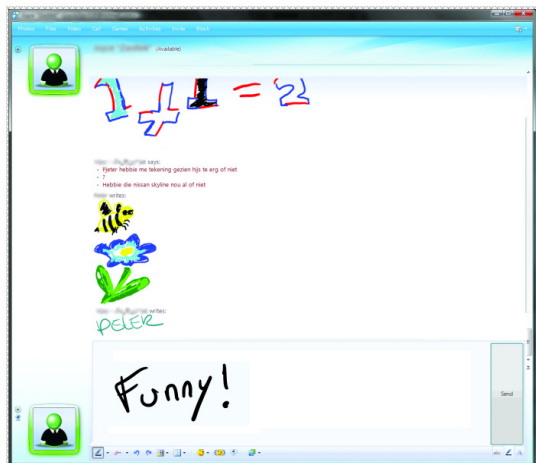

Windows Live Messenger

After connecting and installing your tablet, the handwriting feature of Live Messenger is activated.

It can be accessed by clicking the corresponding button: 

You can then draw and send **messages**  in your own handwriting, and use the six formatting buttons that appear in the conversation window to personalize your messages.



 
Handwritten messages

To send handwritten messages you must have Windows XP, Windows Vista, or Windows 2000 with Service Pack 3 or later installed.

The latest version of Live Messenger is also required

Disabling Input Panel icons and tab

The settings for the positioning and actions related to the Input Panels icon and tab are accessible after opening the panel. Click or tap Tools, then Options. The Opening tab allows you to disable the icon or the tab, or to change their settings.




www.trust.com/16485/faq




Widescreen Mini Tablet

Navigating with your Trust tablet

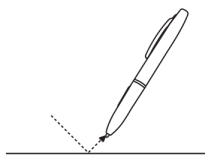

Clicking:

You can use the pen to click, by simply tapping the tablet's surface.

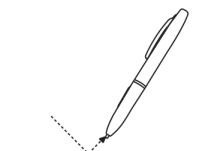

2x


Double clicking:

You can use the pen to **double-click** , by simply tapping the tablet's surface twice.




Double click

By default, the upper button of the pen is configured to act as a double-click

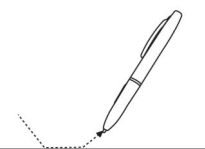

Dragging:

To drag and drop an object, you need to select it (touch the tablet's surface), move it (move the pen across the tablet's surface), and release it (lift the pen from the surface).

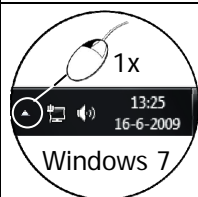

1x



2x

Pen Flicks:

To activate and start using **Pen Flicks** , double click the Pen Flick icon.

Follow the animated tutorial to learn how to use Pen Flicks.



Pen Flicks


Pen Flicks are a feature of Windows Vista and Windows 7 that associates the movement of your pen with actions.

For example, performing a pen flick downward produces the same result as pressing the PAGE UP key on your keyboard.




www.trust.com/16485/faq

Configuring your Trust tablet

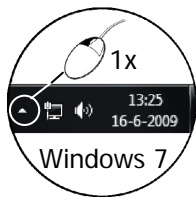


Customizing tablet shortcuts:

Open the **shortcut manager** 

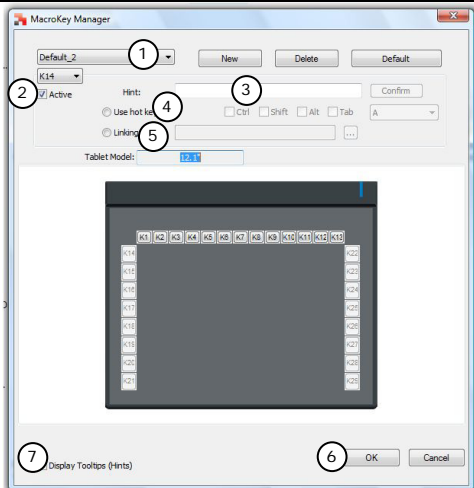


- ① Select the Shortcut key you want to configure
- ② Make sure the Active box is ticked
- ③ Enter a description (Hint)
Either set a key combination (Use hot key ④) or point to a program (Linking ⑤)
- ⑥ Click OK

 Hints will be displayed when you point the pen to one of the shortcuts. To disable them, untick the box ⑦).




Shortcut Manager

To access the Shortcut Manager, the installation of the latest driver available is required.

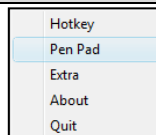


Changing the function of buttons:

Open the Pen Pad interface (select Pen Pad in the right-click menu)

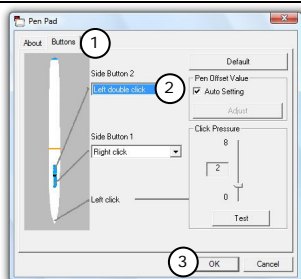

- ① Click or tap the Buttons tab
- ② Select the new function for the desired button
- ③ Click OK

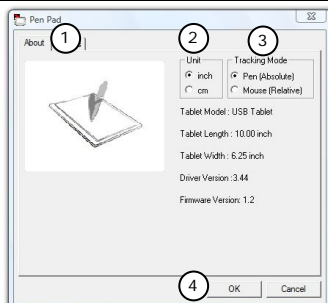

Selecting the appropriate mode:

- ① Click or tap the About tab
- ② Select the unit of measure you want to use
- ③ Select the tracking mode:
 - Pen (Absolute): In this mode, when you touch the tablet's surface, the cursor will jump to the corresponding screen zone.
 - Mouse (Relative): In this mode, the cursor remains where it is when you lift the pen.
- ④ Click OK




Maintenance of your Trust tablet

Cleaning:


Clean the tablet with a dry cloth.

Do not use or spill water on the tablet, or its pen.

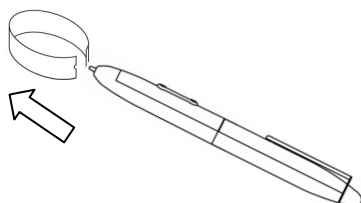


Replacing pen tips:

Use the pen-tip removal tool to pull the used tip out. Insert the new one in its place and push it in.

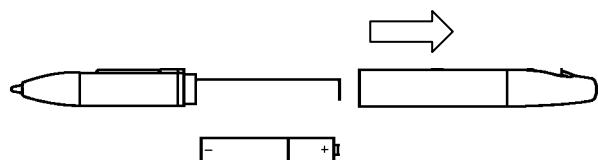

Replacing pen battery:

Open the pen, remove the depleted **battery**  and insert the new one.



Battery

The pen for your tablet uses a standard AAA (LR8) 1,5V battery.
The battery delivered with it is NOT rechargeable.

Storage:

Store the pen so that it does not rest on its tip.

Do not store the pen on the tablet.