


Trust.

NIVEN USER GUIDE

COMFORTABLE MULTI-WIRELESS MOUSE

Bedienungsanleitung | Mode d'emploi | Gebruikershandleiding | Manuale utente | Manual del usuario | Guia do utilizador | Brukerveiledning
Bruksanvisning | Käyttöohje | Brugsvejledning | Instrukcja obsługi | Návod k použití | Návod na používanie | Használati útmutató | Manual de
utilizare | Ръководство за потребителя | Εγχειρίδιο χρήσης | Kullanıcı kılavuzu | Руководство пользователя | Uporabniški priročnik | Korisnički
priručnik | Guia do usuário | Посібник користувача | Naudojimo instrukcija | Lietošanas pamācība | מדריך למשתמש



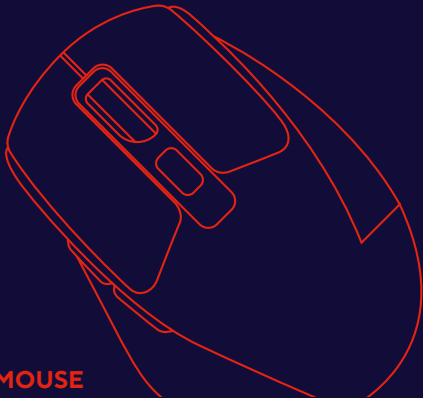


1.

CHARGE OR RECHARGE

Aufladen oder wieder aufladen | Charger ou recharger


Caricare o ricaricare | Cargar o recargar | Naładuj lub doładuj

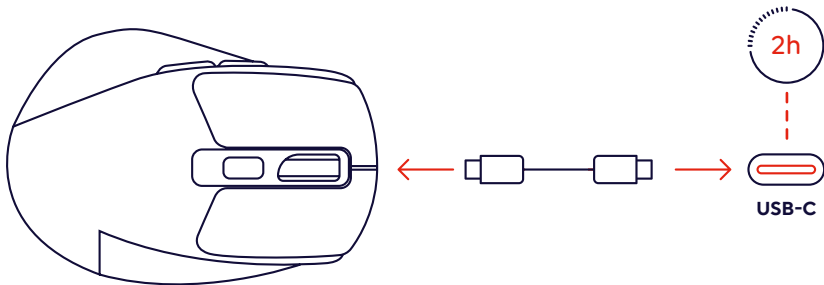  

A.

CONNECT VIA USB-C RECEIVER



Kabellos mit dem Gerät verbinden | Se connecter sans fil à l'appareil
Connettersi in modalità wireless al dispositivo | Conectarse de forma
inalámbrica al dispositivo | Połączyć się bezprzewodowo z urządzeniem

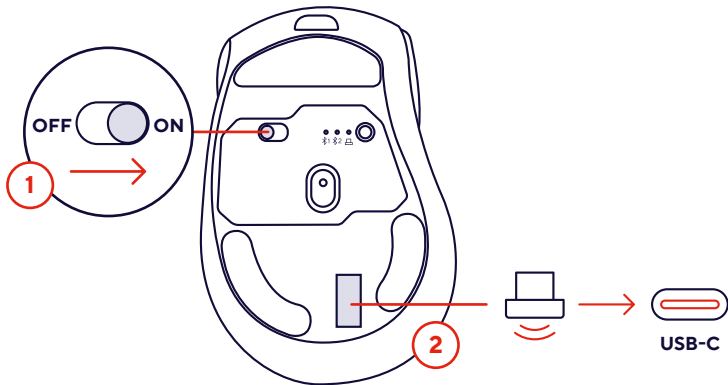

B.

CONNECT VIA BLUETOOTH®


Per Bluetooth® verbinden | Connexion via Bluetooth® | Connetti tramite Bluetooth®
Conéctese vía Bluetooth® | Połącz przez Bluetooth®

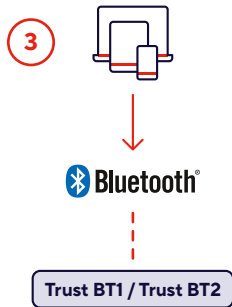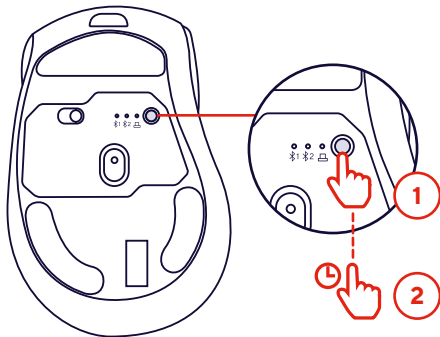

2.

SWITCH DEVICES


Zwischen Geräten wechseln | Basculez entre vos appareils | Passa da un dispositivo all'altro
Cambie de dispositivo | Przełączaj urządzenia

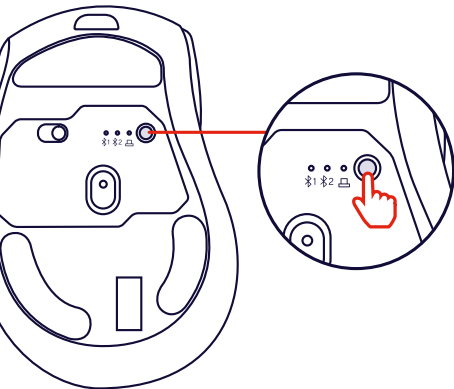

3.

FORWARD / BACKWARDS AND DPI ADJUSTMENT

Vorwärts-/Rückwärtstaste und DPI-Anpassung | Avancer / reculer et réglage du DPI | Avanti / indietro e regolazione DPI
Avance / retroceso y ajuste de DPI | Przyciski do przodu/do tyłu i regulacja DPI

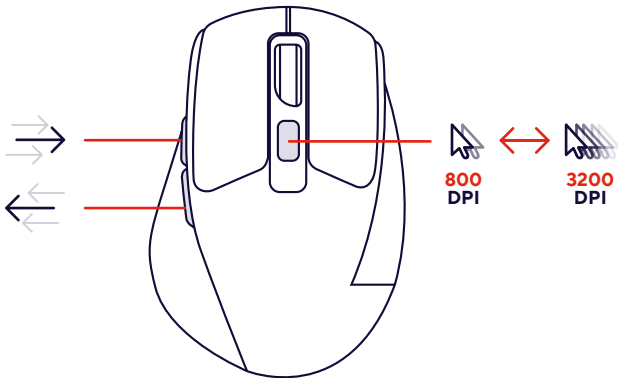

your work • your way

FAQ

[WWW.TRUST.COM/26021/FAQ](https://www.trust.com/26021/FAQ)

Trust International B.V. - Laan van Barcelona 600 - 3317DD, Dordrecht, The Netherlands
©2027 Trust All rights reserved.